

ETABS® Version 18.1.2

© 2020 Computers and Structures, Inc.

Notice Date: 01 December 2020

ETABS v18.1.2 is identical to v18.1.1, except that v18.1.2 uses an ETABS v19 license (Cloud or Legacy), whereas v18.1.1 uses an ETABS v18 license. Model files (.EDB and text) are interchangeable between the two versions, and both versions produce identical results to within the numerical accuracy of the computer.

Contents

1. Installation Instructions for ETABS v18.1.2
2. Trial Version
3. Cloud License
4. Standalone License
5. Network License
6. Requesting License Levels
7. Changing License Mode after Installation
8. File Compatibility with Older Versions

1. Installation Instructions for ETABS v18.1.2

ETABS v18.1.2 is a 64-bit application and must be installed and run on a 64-bit Windows operating system. Windows 8.1 (with Update 2919355) and Windows 10 Build 1507 or higher are currently supported.

The full application must be installed on each workstation where ETABS will be used. Installing ETABS v18.1.2 will uninstall previous versions of ETABS v18, but will not uninstall v19 or versions prior to v18.0.0.

ETABS v18.1.2 is available electronically as a full installation by download from the internet. Two different installations are available, depending on the type of licensing you are using:

- ETABsv1812CloudSetup.exe for use with v19 Cloud licenses
- ETABsv1812LegacySetup.exe for use with v19 Standalone and Network licenses

When you purchase or upgrade to ETABS v19, you will receive an email with an Activation Key and a link to download the correct ETABS v19 installation. Use this same Activation Key for ETABS v18.1.2, but download the corresponding ETABS v18.1.2 installation from the separate

link provided by CSI Sales or Support. Links to download ETABS installations are also available in the CSI Customer Center for authorized users.

After downloading, run the respective installation executable (ETABSV1812CloudSetup.exe or ETABSV1812LegacySetup.exe) and follow the prompts.

Installation of ETABS requires “Administrative” privileges to run. You should expect to be prompted to allow the installer access to system folders and the Windows registry. Please allow it to continue so that the installation can complete.

You may be prompted to install Microsoft C++ redistributable packages at the beginning of the installation. This could include a request to restart the installation or even restart the computer. Please proceed as requested.

See the following sections for specific instructions depending upon the type of v19 licensing to be used. Most users will use a Cloud license.

2. Trial Version

ETABS v19 currently offers a one-time Trial license that may be used to evaluate the product before purchase. ETABS v18.1.2 does not support this Trial license. Please obtain a standard Cloud, Standalone, or Network license for ETABS v19 in order to run ETABS v18.1.2.

3. Cloud License

Most users will use a Cloud license. However, if you are using a Legacy license (Standalone or Network) license, you can skip this section.

Run ETABSV1812CloudSetup.exe as described in Section 1 (Installation Instructions), and then follow the prompts.

The first time you run ETABS after installation, you will be asked to enter contact information for license-support purposes. Next you will be prompted to enter the license Activation Key that was provided when you purchased or upgraded ETABS v19. Thereafter you will not need to re-enter the key unless you explicitly request to change the key. *You will not need to enter this information if you have already done so when installing ETABS v19 for use with a Cloud license.*

The Cloud license communicates with the license server on the Internet via ports 80 and 443. If either of these ports is blocked, they need to be opened to acquire and maintain a license while using the product. If your connection to the internet is through a proxy server, these ports must be opened on that server. Contact your IT department for more information, if necessary, although this is not normally a concern.

The same Activation Key can be activated on multiple machines. Each license Activation Key is associated with a certain number of users (or “seats”), as determined at the time of purchase of the license. When the number of users running ETABS simultaneously with a given Activation Key reaches that limit, no additional users can run ETABS until one of the current users closes the application. If this happens frequently, you may want to consider purchasing additional licenses for ETABS.

To deactivate the license, use the menu command Help > License Information > Change Activation Key. Once a license is deactivated on your machine, you can reactivate it using the same or a different Activation Key. There is normally no need to deactivate the license unless you wish to change the key. Simply closing ETABS makes the license available to another user or machine.

License Check-out (Commuter Feature)

If you want to use ETABS while disconnected from the internet, you can check-out a license for a limited time period. Keep in mind that once you check-out a license on your machine, no other user or machine can use that “seat” until you check the license back in, or until the check-out period expires.

Use the menu command Help > License Information > Checkout License and Check-in License to perform these operations. You must be connected to the internet while checking out or checking in a license. The license will become available to other users when the check-out period expires even if you are not connected to the internet.

4. Standalone License

This section only applies if you have an Activation Key for a Standalone license.

Before installation, be sure to have your Standalone-license Activation Key available. Run ETABSV1812LegacySetup.exe as described in Section 1 (Installation Instructions), and then follow the prompts.

During installation, you will be asked if you want to activate a Standalone license:

- If you have already activated a Standalone license for ETABS v19, Select “No”. After installation of v18.1.2, copy the file “lservc” from the ETABS v19 installation folder to the ETABS v18.1.2 folder.
- If you have not yet activated a Standalone license for ETABS v19, Select “Yes” and enter the Activation Key when prompted.

An active internet connection is required throughout the installation and license-activation process. The license activation server ports are 80 and 443. If either of these ports is blocked, they need to be opened when activating a Standalone license.

After installation, you can activate or deactivate your Standalone license by running StandaloneKey. This is available from the Windows Start menu as “ETABS StandaloneKey 18”, or

you can run StandaloneKey.exe found in the CSiLicensing subfolder of the ETABS installation folder on your machine. You should deactivate the license in the same installation (v19 or v18.1.2) where you activated it, and delete the “lservrc” file from the other installation.

5. Network License

This section only applies if a License Manager is serving licenses on a license server in your local area network. In this case, you will not have an Activation Key, or the Activation Key applies to the licenser server and not to the local workstation running ETABS.

Run ETABSV1812LegacySetup.exe as described in Section 1 (Installation Instructions), and then follow the prompts. An active internet connection is required throughout the installation process.

During installation, you will be asked if you want to activate a Standalone license. Select “No”.

To run ETABS after installation, it is necessary to have a Network license already activated and available on a license server that is accessible to your workstation through your local area network.

See topic [Sentinal RMS License Manager](#) in the CSI Knowledge Base for more information about setting up a network license server running License Manager. This is independent of installing ETABS for use on a local workstation.

To speed up finding a Network license from your workstation when ETABS is launched:

- Create a text file, LMHOST.INI, and enter the network name or IP address of the machine that is running the License Manager.
- If you are serving licenses on more than one machine, enter each name or IP address on a separate line of text.
- Save this file to the folder where ETABS v18.1.2 is installed.
- The LMHOST.INI file can also be placed in the user settings folder, which can be found by entering “%LocalAppData%\Computers and Structures\ETABS 18” (without quotes) in Windows Explorer. Accessing this folder does not require administrative permissions like the installation folder does.
- Files located in the user settings folder will take precedence over those in the installation folder, but they apply only to a single user.

Note that the LMHOST.INI file, if needed, must be created separately for the ETABS v19 and v18.1.2 installation folders and/or user settings folders.

Specifying the desired license level can also speed up finding a Network license from a license server. See Section 6 for more information.

6. Requesting License Levels

When using a Cloud or Network license, you can request a specific license level from amongst the various levels you may have purchased. This can speed up finding a license, since licenses levels are searched to find the first available license. This can also be useful to reserve higher levels for other users when a lower level is adequate for your present usage.

To check the current license level or to make changes on your machine:

- Run CSiLicenseAssistant. This is available from the Windows Start menu as “CSiLicenseAssistant ETABS 18”, or you can run CSiLicenseAssistant.exe found in the CSiLicensing subfolder of the ETABS installation folder on your machine.
- Select the “Summary” action to see the current settings for license mode and license level.
- Select the “Level” action to change the license level.
- Choose the desired license level, or select “Clear Setting” to default to the highest available level.
- Choose whether to apply this level as the default for all users, or as an override for the local (current) user.

If the setting for the local user is undefined, it will use the default for all users. If the setting for the local user is defined, it will override the default for all users when ETABS v18.1.2 is run by the current user, but not by any other user.

Note that changing the default for all users requires administrative rights. You may need to run CSiLicenseAssistant as Administrator to make this change.

Changing the license level applies separately to ETABS v19 and v18.1.2, and is controlled by running their respective versions of CSiLicenseAssistant.

As an alternative to using the CSiLicenseAssistant, you can specify the program level as a command-line option. To do this, use the Windows Run command or create a shortcut pointing to ETABS.exe in the installation folder. Add the following text to the command line after “ETABS.exe” (and after a filename, if present):

/L ProgramLevel

where *ProgramLevel* is one of the following ten values:

ULTIMATE / NONLINEAR / PLUS /
ULTIMATEC / NONLINEARC / PLUSC / PLUSCD /
ULTIMATEI / NONLINEARI / PLUSI

7. Changing License Mode after Installation

After installing ETABS using either the Cloud or Legacy installer, it is possible to change the license mode without needing to reinstall the software.

To check the current license mode or to make changes, run CSiLicenseAssistant. This is available from the Windows Start menu as “CSiLicenseAssistant ETABS 18”, or you can run CSiLicenseAssistant.exe found in the CSiLicensing subfolder of the ETABS v18.1.2 installation folder on your machine. Three actions are available:

- Summary: See the current settings
- License Mode: Change the license mode
- Level: Change the license level (See section Requesting License Level)

Note that when changing the license mode or level, you can set the default for all users or the setting for the local (current) user. If the setting for the local user is undefined, it will use the default for all users. If the setting for the local user is defined, it will override the default for all users when ETABS is run by the current user, but not by any other user.

Changing the license mode or license level applies separately to ETABS v19 and v18.1.2, and is controlled by running their respective versions of CSiLicenseAssistant.

Here are instructions to change license mode for the most common cases:

- Cloud license → Standalone license:
 - Run CSiLicenseAssistant.
 - Go to License Mode, select Standalone License, and Apply.
 - Run StandaloneKey.
 - Enter the Standalone license Activation Key.
- Cloud license → Network license:
 - Run CSiLicenseAssistant.
 - Go to License Mode, select Network License, and Apply.
 - Make sure that your machine has access to a license server running License Manager.
 - You may need to create an LMHOST.INI file as described in section “Network License” above.
- Standalone or Network license → Cloud license:
 - Run CSiLicenseAssistant.
 - Go to License Mode, select Cloud License, and Apply.
 - Run ETABS.
 - Enter the Cloud license Activation Key.
- Network license → Standalone license
 - Run StandaloneKey.

- Enter the Standalone license Activation Key.
- Standalone license → Network license:
 - Run StandaloneKey to deactivate the Standalone license.
 - Make sure that your machine has access to a license server running License Manager.
 - You may need to create an LMHOST.INI file as described in section “Network License” above.

8. File Compatibility with Older Versions

ETABS v18.1.2 is identical to v18.1.1, except that v18.1.2 uses an ETABS v19 license (Cloud or Legacy), whereas v18.1.1 uses an ETABS v18 license. Model files (.EDB and text) are interchangeable between the two versions, and both versions produce identical results to within the numerical accuracy of the computer.

ETABS v18.1.1 and v18.1.2 can open model files (*.EDB), as well as import ETABS text files (*.E2K and *.SET), from the current and previous major version of ETABS (v17.0.0 to v18.1.0), unless specifically stated otherwise in this document or the Release Notes. In most cases ETABS v18.1.1 and v18.1.2 can directly open model files from older versions as well, but if not, they can usually be opened by using the intermediate versions in sequence. CSI cannot be responsible for opening model files for older versions that cannot be run on recent machines or operating systems due to changes beyond CSI's control.

Note that in certain cases results may differ for models run in newer versions compared to older versions due to enhancements and bug fixes as documented in the Release Notes for the intervening versions. Note that once you save or run older models in v18.1.1 or v18.1.2, they will not be usable by older versions of the program, so you should save them under a new name after opening or importing them in v18.1.1 or v18.1.2.